



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		Right / >>		Right
	OPTICAL		8		Right / >>		>> / Preset+
	OPTICAL		4		Bass-		CH- / Page-
	Mute		Mute / Dimmer		Vol-		Vol-
	AUX		7		Vol-		Down
	AUX		1		Bass+		CH+ / Page+
	BT		9		Flat		Red / Netflix / Search
	BT		2		Movie		Green / APP / Repeat
	HDMI ARC		0		Music		Yellow / YouTube / Repeat
	HDMI ARC		3				
	Vol+		Vol+				
	Vol+		Up				
	Left / <<		Left				
	Left / <<		<< / Preset-				
	Play/Pause / Pair		OK				
	Play/Pause / Pair		Pause / Step / Freeze				
	Play/Pause / Pair		Play / Slow				

