














Originalfernbedienung Ersatzfernbedienung

	Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	Clock		D.Menu / Top
	Edit/Check		Display / Media
	PRGM		Setup / OPT /
	Random		Blue / Prime Video / Random
	Repeat/Mono		Green / APP / Repeat
	Disc Direct Play 1		Shift + 1
	Disc Direct Play 2		Shift + 2
	Disc Direct Play 3		Shift + 3
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6




Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/-
	Karaoke Enter		OK
	Karaoke/Vocal/Fader/Multiplex		TV/Radio /
	T-Bass		Audio / Lang I/II
	GEQ		Zoom / Size
	CD		Shift + 4
	<>		Play / Slow
	Video/AUX		Shift + 7
	<</Tuning-		<< / Tune-
	I<</Down		I<< / Preset-
	>>/Tuning+		>> / Tune+
	>>I/Up		>>I / Preset+
	Tuner/Band		Shift + 6



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung



 Rec/Rec Mute	 Rec / Rec Mode		
 Stop/Clear	 Stop / Hold		
 Pause/Set	 Pause / Step / Freeze		
 Tape Deck 1/2	 Shift + 5		
 Power	 Power		
 Volume Down	 Vol-		
 Volume Up	 Vol+		

