 

 

 

 
 




 

 





























 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	ATV		Setup / OPT /
	DTV		D.Menu / Top
	3D		Display / Media
	HDMI		Shift + 0
	Input		AV / Input / RDS
	Sound		Sound / Title
	Picture		Picture / Format
	Zoom		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8






 

 




 

 









 



 

 

Originalfernbedienung Ersatzfernbedienung

	9		9
	Inf/Me		Info / Angle
	0		0
	Rec/Del		Back / Return
	Freeze		Shift + Pause / Step /
	EPG		Guide / EPG / -/-
	MTS		Text / Goto
	Mute		Mute / Dimmer
	Vol+		Vol+
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home







Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Index		Subtitle / EQ
	FAV		Fav / Marker / PC
	List		Smart / List

Originalfernbedienung Ersatzfernbedienung

	Radio		TV/Radio /

