



Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power		Power
	Scene 1		1
	Scene 2		2
	Scene 3		3
	Scene 4		4
	Straight		Audio / Lang I/II
	Pure Direct		Subtitle / EQ
	Enhancer		Text / Goto
	Sur.Decode		Picture / Format
	< Program		CH- / Page-
	Program >		CH+ / Page+
	Input Up		Shift + Up
	Tuner		6
	Volume+		Vol+
	USB		8
	Input Down		Shift + Down

Originalfernbedienung Ersatzfernbedienung

	NET		Fav / Marker / PC
	Volume-		Vol-
	Bluetooth		9
	Mute		Mute / Dimmer
	Setup		Setup / OPT /
	Up		Up
	Option		Shift + Setup / OPT / Tools
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Display		Display / Media
	Top Menu		D.Menu / Top
	Home		Menu / Home
	Pop-Up/Menu		Shift + Menu /
	Red		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	I<<		I<< / Preset-
	Play/Memory		Play / Slow
>>I button"/>	>>I		>>I / Preset+
	<< Tuning		<< / Tune-
	Stop/Mode		Stop / Hold
	Pause/Band		Pause / Step / Freeze
	Tuning >>		>> / Tune+
	< Preset		Shift + I<< / Preset-
	Preset >		Shift + >>I / Preset+

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power		Power
	Scene 1		1
	Scene 2		2
	Scene 3		3
	Scene 4		4
	Input Up		Shift + Up
	Tuner		6
	Volume+		Vol+
	USB		8
	Input Down		Shift + Down
	NET		Fav / Marker / PC
	Volume-		Vol-
	Bluetooth		9
	Mute		Mute / Dimmer
	Up		Up
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Display		Display / Media
	Top Menu		D.Menu / Top
	Home		Menu / Home
	Pop-Up/Menu		Shift + Menu /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	I<<		I<< / Preset-
	Play/Memory		Play / Slow
	>>I		>>I / Preset+
	<< Tuning		<< / Tune-
	Stop/Mode		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

BAND	Pause/Band	STEP-FREEZE	Pause / Step / Freeze
TUNING	Tuning >>	TUNE+	>> / Tune+
PRESET-	< Preset	SHIFT + PRESET-	Shift + << / Preset-
PRESET+	Preset >	SHIFT + PRESET+	Shift + >> / Preset+

Originalfernbedienung Ersatzfernbedienung

