 



 





 



 

 

 



 

 

 

 

 



 

 



 





 

 

 

 

 

 



 





 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Eject		Eject / Surround
	Index		Info / Angle
	Rec Speed		Setup / OPT /
	CLK/Count		D.Menu / Top
	Picture		Picture / Format
	Timer		Sleep / Timer
	1		1
	2		2
	3		3
	Strobe		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	Art		Text / Goto
	Input		AV / Input / RDS



Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	+		Vol+
	CH+		CH+ / Page+
	100		Guide / EPG / -/-
	0		0
	CLR/RST		Exit / Cancel / Clear
	-		Vol-
	CH-		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause/Still		Pause / Step / Freeze
	Display		Display / Media





Originalfernbedienung Ersatzfernbedienung

	Monitor		Yellow / YouTube / Repeat
	A.Dub		Sound / Title
	Input System		Red / Netflix / Search
	Up		Up
	Output System		Green / APP / Repeat
	Left		Left
	OK		OK
	Right		Right
	Auto		Smart / List
	Down		Down
	Menu		Menu / Home
	← Tracking		I<< / Preset-
	Trackink →		>>I / Preset+
	Slow-		Shift + Down
	Slow+		Shift + Up

Originalfernbedienung Ersatzfernbedienung

