
 






 

 
 









 

 
 










Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	TV Input		AV / Input / RDS
	TV Power	 + 	Shift + Power
	Power		Power
	1		1
	2		2
	3		3
	Vol+		Vol+
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Vol-		Vol-
	Audio		Audio / Lang I/II
	0		0

Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Top Menu		D.Menu / Top
	Up		Up
	Pop Up / Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home		Smart / List
	Home	 + 	Shift + Menu / Home



