



 











 

 
 
 











Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------------------|
|  | Data Screen |  | Smart / List |
|  | On |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Prog+ |  | CH+ / Page+ |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Prog- |  | CH- / Page- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Volume+ |  | Vol+ |
|  | 0 |  | 0 |
|  | 1- |  | Guide / EPG / -/-- |
|  | 2- |  | Fav / Marker / PC |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------|
|  | Volume- |  | Vol- |
|  | Rec |  | Rec / Rec Mode |
|  | Pause |  | Pause / Step / Freeze |
|  | Frame |  | Display / Media |
|  | X2 |  | Picture / Format |
|  | Wake Up |  | OK |
|  | X1/10 |  | Text / Goto |
|  | X1/5 |  | AV / Input / RDS |
|  | Muting |  | Mute / Dimmer |
|  | Counter Reset |  | Back / Return |
|  | Play |  | Play / Slow |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Stop |  | Stop / Hold |
| | | | |
| | | | |
| | | | |

