



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV System		Menu
	Display		Info
	Audio		Dual
	Subtitle		Subt
	Recall		Pre Ch
	A-B		Shift + Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0


 
 
 

 
 

Originalfernbedienung Ersatzfernbedienung

	Text		Text
	Timeshift		Format
	Rec		Rec
	Sel Favor / Vol +		Vol +
	Load Favor / Vol -		Vol -
	Source		AV
	Edit		3D
	EPG		Guide
	TV / MHR		Shift + TV/R
	DTV		TV/R
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Left		Left
	Enter		Ok
	Right		Right



 

 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Back		Back
	Home		Smart
	Goto		List
	Play		Play
	Stop		Stop
	Pause		Pause
	Skip ←		Shift + Left
	Skip →		Shift + Right
	Red / <<<		Red
	Red / <<<		<<<
	Green / >>>		Green
	Green / >>>		>>>
	Yellow / I<<<		Yellow
	Yellow / I<<<		I<<<
	Blue / >>>I		Blue
	Blue / >>>I		>>>I
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Timer Rec		Shift + AV
	Zoom		Eject
	HDD		Media
	USB		Shift + Media
	LAN		Options

