 

 







 


 
 

 

 
 
 
 
 

 

 



 



 

 

 

 

 

 









 
 
 

 

 

 
 
 
 






| Originalfernbedienung   | Ersatzfernbedienung | Originalfernbedienung   | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|      | Power Xbox          |      | Power               |
|      | Power Tv            |      | Shift + Power       |
|      | World               |      | MEDIA               |
|      | Yellow/Y            |      | Yellow (C)          |
|      | Blue/X              |      | Blue (D)            |
|      | Green/A             |      | Green (B)           |
|      | Red/B               |      | Red (A)             |
|      | Play                |      | Play                |
|      | Pause               |      | Pause               |
|      | >>                  |      | Fast Forward        |
|     | <<                  |     | Rewind              |
|    | I<                  |    | First               |
|    | >I                  |    | Last                |
|    | Menu                |    | MENU                |
|    | Info                |    | INFO                |
|    | Rec                 |    | Rec                 |
|    | OK                  |    | OK                  |
|    | Up                  |    | UP                  |
|    | Down                |    | DOWN                |
|    | Right               |    | RIGHT               |
|    | Left                |    | LEFT                |
|    | Guide               |    | -/-- / EPG          |
|    | Back                |    | BACK                |
|    | Vol+                |    | VOL +               |
|    | Vol-                |    | VOL -               |
|    | CH/PG+              |    | CH +                |
|    | CH/PG-              |    | CH -                |
|   | Mute                |   | MUTE                |
|  | Last                |  | P/C / FAV           |
|  | Line Tv             |  | TV/R                |
|  | Input               |  | SRC                 |
|  | Disp                |  | VOD                 |
|  | 1                   |  | 1                   |
|  | 2                   |  | 2                   |



