 

 
 





 



 




 
 








 








Originalfernbedienung Ersatzfernbedienung

	Power STB		Power
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	l<		l<<
	>l		>>l
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Video		Format
	Menu		Menu
	i		Info
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Guide		Guide
	X		Exit
	Vol+		Vol +
	Vol-		Vol -
	↑		Shift + Up
	↓		Shift + Down
	CH+		Ch +
	CH-		Ch -
	Mute		Mute
	P < P		Pre Ch
	1		1
	2		2





 




 




 
 




Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Titles		Subt

 




 

 






 


Originalfernbedienung Ersatzfernbedienung




Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Epg		Guide
Subt.List		Subt
Opt?		Options
App		Media
Sleep Timer		Sleep
TV		TV/R
Text		Text
Zoom		Eject
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Back		Back
CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

Audio		Dual
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





 



 





 






 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Freeze			Stop
H/V Play			Play
East			>>
Lang./Rewind			<<
LNB F.Forward			>>
Dec/Pause			Pause




Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute
Opt?		Options
App		Media
Subt.List		Subt
Info		Info
Video		D. Menu
Zoom		Eject
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Volume+		Vol +

Originalfernbedienung Ersatzfernbedienung

CH/Page+		Ch +
Volume-		Vol -
Audio		Dual
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Green		Green	
Yellow		Yellow	
Blue		Blue	
Dev		List	
West		I<<	
Dec/Pause		Pause	
		Shift + Ch +	
		Shift + Ch -	
Freeze		Stop	
East		>>I	
LNB F.Forward		>>	
Lang./Rewind		<<	
H/V Play		Play	

