


**Originalfernbedienung Ersatzfernbedienung**

	Aper / Chiuso		Eject / Surround
	Video / Y		AV / Input / RDS
	Power		Power
	OSD		Display / Media
	PBC		D.Menu / Top
	Titolo		Sound / Title
	Menu		Menu / Home
	Ricerca		Red / Netflix / Search
	1		1
	2		2
	3		3
	Repeticione		Green / APP / Repeat
	4		4
	5		5
	6		6
	A-B RPT		Yellow / YouTube / Repeat
	7		7

**Originalfernbedienung Ersatzfernbedienung**

	8		8
	9		9
	Prog		TV/Radio /
	Intro		Smart / List
	0		0
	10+		Guide / EPG / -/-
	Pausa		Pause / Step / Freeze
	Info / Play		Play / Slow
	Info / Play		Info / Angle
	Up		Up
	Left		Left
	Setup		Setup / OPT /
	Right		Right
	Ritorno		Back / Return
	Down		Down
	Stop		Stop / Hold
	<  Ralent		CH- / Page-



