







 

 

 



 
 


 
 
 

 



 


 
 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby / On		Power
	Open / Close		Eject
	PS/IS		Red
	Scan		Green
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	Goto		Guide

**Originalfernbedienung    Ersatzfernbedienung**

	Zoom		Shift + Eject
	Add / Clear		Exit
	Navigation		List
	Menu		Menu
	Finalize		Yellow
	Timer		Shift + AV
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Edit		Blue
	Quality		3D
	Audio		Dual
	Disc Oper		Smart
	Erase		Shift + Back
	Angle		Format








**Originalfernbedienung    Ersatzfernbedienung**

	Title		D. Menu
	Setup		Options
	Subtitle		Subt
	Slow	 + 	Shift + Play
	Vol+		Vol +
	Vol-		Vol -
	Repeat		Text
	Prog		Sleep
	Random	 + 	Shift + TV/R
	Return P<->P		Back
	DV/USB		Media
	I<< Prev		I<<
	Next >>I		>>I
	TV		TV/R
	Source		AV
	<< Rev		<<
	Play		Play

**Originalfernbedienung    Ersatzfernbedienung**

	Fwd >>		>>
	Channel+		Ch +
	Channel-		Ch -
	Rec / Otr		Rec
	Stop		Stop
	Pause / Step		Pause

