




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display	 + 	Shift + Info
	Mute		Mute
	Video		Back
	Scart		Smart
	PC		Media
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

 
 
Originalfernbedienung Ersatzfernbedienung

	Subpage		Eject
	PRE-CH		Pre Ch
	Source		AV
	PIP		3D
	Sound		Dual
	Sleep		Sleep
	DTV Menu		D. Menu
	Zoom-		<<
	Zoom+		>>
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Teletext		Text
	Mix		Options
	Info		Info
	Index		Guide
	Size		Format
	Hold		List
	Subtitle		Subt
	Reveal	 + 	Shift + Text

Originalfernbedienung Ersatzfernbedienung

