



































**Originalfernbedienung Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute / Dimmer
H/V Play		Play / Slow
Dec/Pause		Pause / Step / Freeze
		Stop / Hold
East		Rec / Rec Mode
Lang./Rewind		<< / Tune-
LNB F.Forward		>> / Tune+
Interat		I<< / Preset-
+		>>I / Preset+
De-emph		Sound / Title
50j17		Audio / Lang I/II
Subt.List		Subtitle / EQ
Navi Mode		Eject / Surround
Alt/16:9		Picture / Format
Wn		Zoom / Size
Sleep Timer		Sleep / Timer

**Originalfernbedienung Ersatzfernbedienung**


















Radio		TV/Radio /
Sys/Serv		D.Menu / Top
Scan/Setup		Setup / OPT /
Text		Text / Goto
P.lock		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Swap		Back / Return
Volume+		Vol+
TV		Smart / List
CH/Page+		CH+ / Page+



**Originalfernbedienung    Ersatzfernbedienung**

Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
On/Off		Shift + Power
Freeze		Shift + Pause / Step /
		Shift + Stop /
Tune-		Shift + << /
Tune+		Shift + >> /
Aft/Caf		Shift + D.Menu / Top Menu
Auth./DISEQC		Shift + Menu /
Help		Shift + Info / Angle
View		Shift + OK
Clear		Shift + Exit / Cancel / Clear
Copy/Delete		Shift + Smart / List
CHH+		Shift + CH+ /
Erase		Shift + Display / Media
CHH-		Shift + CH- /
Video		Shift + 4



Originalfernbedienung Ersatzfernbedienung

App	SHIFT + GREEN REPEAT	Shift + Green / APP / APP /

Originalfernbedienung Ersatzfernbedienung