







Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Menu audio		Audio / Lang I/II
Surround		Eject / Surround
Txt Expand		Zoom / Size
Return TV		TV/Radio /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down

Originalfernbedienung Ersatzfernbedienung

Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

