














 

 





 

 



 

 
 



 




















 
 






Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	EPG		Guide
	Menu		Menu
	Exit		Exit
	OK/List		Ok










 

















 
Originalfernbedienung    Ersatzfernbedienung

	←PR		Back
	FAV		Pre Ch
	Up		Up
	PR+		Ch +
	PR-		Ch -
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Red/Find		Red
	Green/Zoom		Green
	Yellow		Yellow
	Text		Text
	Blue		Blue
	Audio L/R		Dual
	Info		Info





<b>Originalfernbedienung</b>	<b>Ersatzfernbedienung</b>
------------------------------	----------------------------

	Tv/AV		AV
	Sleep		Sleep
	[+]		Options
	Record		Rec
	Play		Play
	Stop		Stop
	Shift		Media
	<< Fast		<<
	Fast >>		>>
	< Slow		I<<
	Slow >		>>I
	Pause		Pause
	↑/Page+		3D
	↓/Page-		Format

<b>Originalfernbedienung</b>	<b>Ersatzfernbedienung</b>
------------------------------	----------------------------