 
 
 
 














 











Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	FREEZE		Pause
	HIDE		Media
	ASPECT RATIO		Format
	RESYNC		Smart
	SOURCE		AV
	ZOOM		Eject
	e		3D
	Up/Keystone Up		Up
	Left		Left
	MENU		Menu
	Right		Right
	Down/Keystone		Down
	1/RGB		1
	1/RGB		Red
	2/BRIGHTNESS		2
	2/BRIGHTNESS		Green

Originalfernbedienung Ersatzfernbedienung

	3/COLOR		3
	3/COLOR		Yellow
	4/VGA		4
	5/COMPONENT		5
	6/VIDEO		6
	7/DVI		7
	8/HDMI		8
	9/WIRELESS		9
	0/MUTE		Mute
	0/MUTE		0
	PgUp/CONTRAS		Ch +
	PgUp/CONTRAS		Blue
	PgDn/S-Video		Ch -

