

 



















 

 













Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	AV		AV / Input / RDS
	Menu		Menu / Home
	Red		Red / Netflix / Search
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Green / PP		Green / APP / Repeat
	Yellow / Analog		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	P+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	Right		Right
	Vol+		Vol+
	P-		CH- / Page-
	Down		Down
	Recall		Back / Return
	Sleep		Sleep / Timer
	Status		Info / Angle
	Tv/TXT		Text / Goto
	Stop		Stop / Hold
	Reveal		Pause / Step / Freeze



