


 

 

















 

 













 



 













 





 

 






Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	AUDIO / I/II		Dual
	MUTE		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SLEEP		Sleep
	REPEAT		Shift + Text
	EXIT		Exit
	MENU		Menu

Originalfernbedienung Ersatzfernbedienung

	SOURCE		AV
	INFO		Info
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	VOL+		Vol +
	VOL-		Vol -
	CH-		Ch -
	CH+		Ch +
	P. MODE		Format
	S.MODE		Shift + Dual
	P. SIZE		Eject
	GUIDE		Guide
	LIST		List
	DTV / RADIO		TV/R




Originalfernbedienung Ersatzfernbedienung

	FAV CH.		Pre Ch
	SUBTITLE		Subt
	PLAY / PAUSE		Play
	PLAY / PAUSE		Pause
	TS		Options
	STOP		Stop
	REC		Rec
	TEXT / GO TO		Text
	RED		Red
	<<		l<<
	GREEN		Green
	>>		>>l
	YELLOW		Yellow
	REW		<<
	BLUE		Blue
	FWD		>>

Originalfernbedienung Ersatzfernbedienung

