

 



 
 
 
 

 
 
 
 
 






 

 

 
 
 

 

 
 
 
 
 

 
 




Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Sleep	 Sleep
 Timer Standby	 +  Shift + Sleep
 Tuner	 Red
 Band	 Green
 FM Mode	 Yellow
 Clock / Timer	 AV
 Direct Play 1	 +  Shift + 1
 Direct Play 2	 +  Shift + 2
 Direct Play 3	 +  Shift + 3
 Direct Play 4 / Change	 +  Shift + 4
 Direct Play 5 / Cont	 +  Shift + 5
 Tuner/CD 1	 1
 Tuner/CD 2	 2
 Tuner/CD 3	 3
 Tuner/CD 4	 4
 Tuner/CD 5	 5

Originalfernbedienung	Ersatzfernbedienung
 Tuner/CD 6	 6
 Tuner/CD 7	 7
 Tuner/CD 8	 8
 Tuner/CD 9	 9
 Tuner/CD 10/0	 0
 CD	 Smart
 CD Edit AI	 Options
 CD Edit PRGM	 Dual
 CD PRGM /	 Subt
 CD +10	 Guide
 CD << / <<	 <<
 CD >> / >>	 >>
 CD Stop / Clear	 Stop
 CD Play / Pause	 Play
 Deck 2 Pause	 Pause
 Deck 2 REC / REC Mute	 Rec
 Deck 2 MS <<	 +  Shift + <<



 
 




 
 
 

 
 




 







Originalfernbedienung Ersatzfernbedienung

	Deck 2 MS >>		Shift + >>
	Deck 2 Stop		Shift + Pause
	Deck 2 Play / Reverse <>		Shift + Right
	Deck 1/CD MS << / Display		<<
	Deck 1/CD MS >> / Repeat		>>
	Deck 1/CD Stop		Shift + Stop
	Deck 1/CD Play / Rev. / Random		Shift + Play
	DSP		Pre Ch
	Up		Up
	Right / Delay		Right
	Down		Down
	Left		Left
	PRGM / Test Mode		Info
	Manual / Mode		Back
	GEQ Off / On		Ok
	Tape		Media
	Phono		Shift + Smart

Originalfernbedienung Ersatzfernbedienung

	Video1 / AUX1		Shift + Media
	Karaoke		Menu
	Video2 / AUX2		Blue
	AI A/B		Format
	T-BASS		3D
	BBE		Exit
	Surround / Dolby Pro Logic		TV/R
	Surround / Volume Select		List
	Mute		Mute
	Volume Down		Vol -
	Volume Up		Vol +

