





 
 
 

 

 
 


 
 

 



 

 
 
 

 
 
 

 
 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 

 
 
 


 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Disc Direct Play 1		Red
	Disc Direct Play 2		Green
	Disc Direct Play 3		Yellow
	CD EDiT/Check		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	+10		Guide
	PRGM		Options
	Random/Repeat		Text
	GEQ		Media
	T.Bass		Subt
	Timer		AV
	Sleep		Sleep
	Clock		Info
	Mono Tuner		Dual
	Band		3D
	Function		Menu
	Preset Up		Up
	Preset Down		Down
	Tuning Up		Right
	Tuning Down		Left
	Play/<>		Play
	Stop/Clear		Stop



