












 
 

 

 





 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Input Select		AV / Input / RDS
	TV/Video		TV/Radio /
	SP/LP		Zoom / Size
	Zero Return		Back / Return
	Rec. End Search		Red / Netflix / Search
	Auto Tracking		Smart / List
	1		1
	2		2
	3		3
	CM Skip		Info / Angle
	4		4
	5		5
	6		6
	Child Lock		Green / APP / Repeat
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	<<		<< / Tune-
	<<		I<< / Preset-
	Play		Play / Slow
	>>		>> / Tune+
	>>		>>I / Preset+
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	OTPB		Display / Media
	i / Menu		Menu / Home
	OK /		OK
	Clear		Exit / Cancel / Clear
	Rec		Rec / Rec Mode
	Left		Left
	Up /		Up



CH/Tracking+

