

 

 

 



 







 





 



 

 



 

 



 

 

 

 

 

 

 

 

 





 

 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|-----------------------------|
|  | Timer |  | Shift + Sleep / Timer |
|  | Sleep |  | Sleep / Timer |
|  | FM Mode |  | TV/Radio / |
|  | Clock |  | Text / Goto |
|  | Random |  | Blue / Prime Video / Random |
|  | Repeat |  | Green / APP / Repeat |
|  | DSP |  | Display / Media |
|  | Edit/Remain |  | Smart / List |
|  | PRGM |  | Setup / OPT / |
|  | Open/Close |  | Eject / Surround |
|  | Disc Direct Play 1 |  | Shift + 1 |
|  | Disc Direct Play 2 |  | Shift + 2 |
|  | Disc Direct Play 3 |  | Shift + 3 |
|  | Disc Skip |  | Yellow / YouTube / Repeat |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|------------------------|
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide / EPG / -/- |
|  | Tape/Deck 1/2 |  | Zoom / Size |
|  | Tuner/Band |  | Red / Netflix / Search |
|  | Video/AUX |  | AV / Input / RDS |
|  | CD |  | Fav / Marker / PC |
|  | <> Direction |  | Play / Slow |
|  | BBE |  | Audio / Lang I/II |
|  | I<</Down/<< |  | << / Tune- |
|  | >>/Up/>>I |  | >> / Tune+ |
|  | T-Bass |  | Sound / Title |



