




































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Function		Menu / Home
	CD Edit/Check		Text / Goto
	Program		TV/Radio /
	Random/Repeat		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	Timer		Shift + Sleep / Timer
	Sleep		Sleep / Timer
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	0		0
	+10		Fav / Marker / PC
	Mono Tuner		Audio / Lang I/II
	Play/Preset		Play / Slow
	Band		AV / Input / RDS
	T-Bass		<< / Tune-
	Pause/Set		Pause / Step / Freeze
	>>/>>		>> / Tune+
	T-Bass		Sound / Title
	Stop/Clear		Stop / Hold
	Treble		Smart / List
	Disc Direct Play 1		Red / Netflix / Search
	Disc Direct Play 2		Green / APP / Repeat
	Disc Direct Play 3		Yellow / YouTube / Repeat
	Volume+		Vol+
	Clock		Info / Angle
	Volume-		Vol-

