



**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |                    |
|---|--------------|---|--------------------|
|    | Open / Close |    | Eject / Surround   |
|    | Display      |    | Display / Media    |
|    | Power        |    | Power              |
|    | 1            |    | 1                  |
|    | 2            |    | 2                  |
|    | 3            |    | 3                  |
|    | 4            |    | 4                  |
|    | 5            |    | 5                  |
|    | 6            |    | 6                  |
|    | 7            |    | 7                  |
|   | 8            |   | 8                  |
|  | 9            |    | 9                  |
|  | 0            |    | 0                  |
|  | 10+          |    | Guide / EPG / -/-- |
|  | GOTO         |  +  | Shift + Text /     |
|  | Title / TTX  |    | Text / Goto        |
|  | Title / TTX  |    | Sound / Title      |



**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |                       |
|---|--------------|---|-----------------------|
|    | Subtitle     |    | Subtitle / EQ         |
|    | Angle        |    | Info / Angle          |
|    | Language     |    | Audio / Lang I/II     |
|    | Menu         |    | Menu / Home           |
|    | Up / CH +    |    | CH+ / Page+           |
|    | Up / CH +    |    | Up                    |
|    | Setup        |    | Setup / OPT /         |
|    | Left         |    | Left                  |
|    | Enter        |    | OK                    |
|    | Right        |    | Right                 |
|   | <<           |   | << / Tune-            |
|  | Down / CH -  |  | Down                  |
|  | Down / CH -  |  | CH- / Page-           |
|  | >>           |  | >>  / Preset+         |
|  | >>           |  | >> / Tune+            |
|  | Play / Pause |  | Pause / Step / Freeze |
|  | Play / Pause |  | Play / Slow           |





 





## Originalfernbedienung Ersatzfernbedienung

|   |            |   |                             |
|---|------------|---|-----------------------------|
|    | I <<       |    | I << / Preset-              |
|    | Vol -      |    | Vol-                        |
|    | Vol +      |    | Vol+                        |
|    | Stop       |    | Stop / Hold                 |
|    | Switch     |    | Smart / List                |
|    | Zoom       |    | Zoom / Size                 |
|    | Mute       |    | Mute / Dimmer               |
|    | TV / Radio |    | TV/Radio /                  |
|    | RAN        |    | Blue / Prime Video / Random |
|    | PBC        |    | Fav / Marker / PC           |
|    | Return     |    | Back / Return               |
|  | L / R      |  | Sleep / Timer               |
|  | N / P      |  | AV / Input / RDS            |
|  | Slow       |  | Shift + Play /              |
|  | Repeat     |  | Green / APP / Repeat        |
|  | Prog / EPG |  | Shift + Guide / EPG / -/-   |
|  | Prog / EPG |  | Shift + TV/Radio / Program  |

## Originalfernbedienung Ersatzfernbedienung

|   |            |   |                           |
|---|------------|---|---------------------------|
|  | Video      |  | Shift + 4                 |
|  | CD Ripping |  | Picture / Format          |
|  | A - B      |  | Yellow / YouTube / Repeat |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |
|   |            |   |                           |

