 









 
 

 



 


 


 

 
 





 
 
 
 
 
 

 

 


 
 
 


 
 
 
 
 
 
 




 

 
 








Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Rec List		List
	Recall		Back
	Auto		Smart
	Subtitle		Subt
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	TV / Radio		TV/R
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	FAV		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Rec		Rec
	Timeshift		Media
	CH+		Ch +
	CH-		Ch -
	Source		AV





Originalfernbedienung Ersatzfernbedienung

	PMode	+	Shift + Format
	SMode	+	Shift + Dual
	Sleep		Sleep
	Text		Text
	Hold	+	Shift + Stop
	Reveal		3D
	Subpage	+	Shift + Subt
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	Index		D. Menu
	Size		Format
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

