





















 















 
 










 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Play / Size		Play / Slow
	Pause /		Pause / Step / Freeze
	Stop / Hold		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Pic. Mode		Picture / Format
	Sleep		Sleep / Timer
	TV / Radio		TV/Radio /
	Index		D.Menu / Top
	Text		Text / Goto




















 

 












Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	CH. List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2







Originalfernbedienung Ersatzfernbedienung

	3	 CD - STB	3
	4	 VIDEO	4
	5	 TAPE	5
	6	 TUNER	6
	7	 AUX - HDD	7
	8	 USB	8
	9	 BLUETOOTH	9
	0	 HDMI - BAT	0
	FAV	 PC FAV MARKER	Fav / Marker / PC
	Red	 NETFLIX SEARCH	Red / Netflix / Search
	Green	 APP REPEAT	Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM	Blue / Prime Video / Random
	Aspect	 SHIFT + PICTURE	Shift + Picture / Format
	Home	 SHIFT + MENU	Shift + Menu /
	Reveal	 SHIFT + BACK	Shift + Back / Return
	Mouse	 SHIFT + SMART	Shift + Smart / List

Originalfernbedienung Ersatzfernbedienung

	IE	 SHIFT + MEDIA DISPLAY	Shift + Display / Media

