











 



 

 

| Originalfernbedienung | Ersatzfernbedienung |
|--|---|
|  P100 |  Display / Media |
|  Power |  Power |
|  REV |  << / Tune- |
|  Doub |  Audio / Lang I/II |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Hold |  Stop / Hold |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Sub |  Subtitle / EQ |
|  Update |  D.Menu / Top |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Mix |  Text / Goto |

| Originalfernbedienung | Ersatzfernbedienung |
|---|--|
|  AV |  AV / Input / RDS |
|  0 |  0 |
|  -/-- |  Guide / EPG / -/-- |
|  P+ |  CH+ / Page+ |
|  Up |  Up |
|  Mute |  Mute / Dimmer |
|  TV/TXT |  TV/Radio / |
|  Menu |  Menu / Home |
|  Left |  Left |
|  Vol- |  Vol- |
|  OK |  OK |
|  Right |  Right |
|  Vol+ |  Vol+ |
|  Swap |  Back / Return |
|  P- |  CH- / Page- |
|  Down |  Down |
|  16:9 |  Picture / Format |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Violet |  | Smart / List |
|  | [] |  | Setup / OPT / |
|  | ♪ |  | Sound / Title |
|  | PP |  | Shift + Smart / List |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

