




Originalfernbedienung Ersatzfernbedienung

|   |       |   |                    |
|---|-------|---|--------------------|
|    | POWER |    | Power              |
|    | 1     |    | 1                  |
|    | 2     |    | 2                  |
|    | 3     |    | 3                  |
|    | 4     |    | 4                  |
|    | 5     |    | 5                  |
|    | 6     |    | 6                  |
|    | 7     |    | 7                  |
|    | 8     |    | 8                  |
|    | 9     |    | 9                  |
|   | MUTE  |   | Mute / Dimmer      |
|  | 0     |  | 0                  |
|  | TEXT  |  | Text / Goto        |
|  | GUIDE |  | Guide / EPG / -/-- |
|  | INFO  |  | Info / Angle       |
|  | UP    |  | Up                 |
|  | FAV   |  | Fav / Marker / PC  |

Originalfernbedienung Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | LEFT          |    | Left                        |
|    | OK            |    | OK                          |
|    | RIGHT         |    | Right                       |
|    | LAST          |    | Exit / Cancel / Clear       |
|    | DOWN          |    | Down                        |
|    | Back          |    | Back / Return               |
|    | Menu          |    | Menu / Home                 |
|    | RED / MOSAIC  |    | Red / Netflix / Search      |
|    | GREEN / SLEEP |    | Shift + Sleep / Timer       |
|    | GREEN / SLEEP |    | Green / APP / Repeat        |
|   | YELLOW /      |   | Yellow / YouTube / Repeat   |
|  | YELLOW /      |  | Audio / Lang I/II           |
|  | BLUE / LIST   |  | Smart / List                |
|  | BLUE / LIST   |  | Blue / Prime Video / Random |
|  | VOL+          |  | Vol+                        |
|  | PAGE UP       |  | Shift + CH+ /               |
|  | CH+           |  | CH+ / Page+                 |





Originalfernbedienung   Ersatzfernbedienung

|  |              |  |                          |
|--|--------------|--|--------------------------|
|  | VOL-         |  | Vol-                     |
|  | PAGE DOWN    |  | Shift + CH- /            |
|  | CH-          |  | CH- / Page-              |
|  | REW          |  | << / Tune-               |
|  | PLAY / PAUSE |  | Play / Slow              |
|  | PLAY / PAUSE |  | Shift + Pause / Step /   |
|  | STOP         |  | Stop / Hold              |
|  | FWD          |  | >> / Tune+               |
|  | REC          |  | Rec / Rec Mode           |
|  | OPTION       |  | Setup / OPT /            |
|  | MEDIA        |  | Display / Media          |
|  | TIME SHIFT   |  | Eject / Surround         |
|  | Pause        |  | Pause / Step / Freeze    |
|  | PIP          |  | AV / Input / RDS         |
|  | SWAP         |  | Shift + AV / Input / RDS |
|  | TIMER        |  | Sleep / Timer            |
|  | Video FORMAT |  | Picture / Format         |

Originalfernbedienung   Ersatzfernbedienung

|  |          |  |              |
|--|----------|--|--------------|
|  | ZOOM     |  | Zoom / Size  |
|  | TV/Radio |  | D.Menu / Top |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |
|  |          |  |              |

