 

 

 

 

 

 

 

 



 

 
 
 
 


 





 

 
 
 


 

 

 

 

 
 
 

 

 






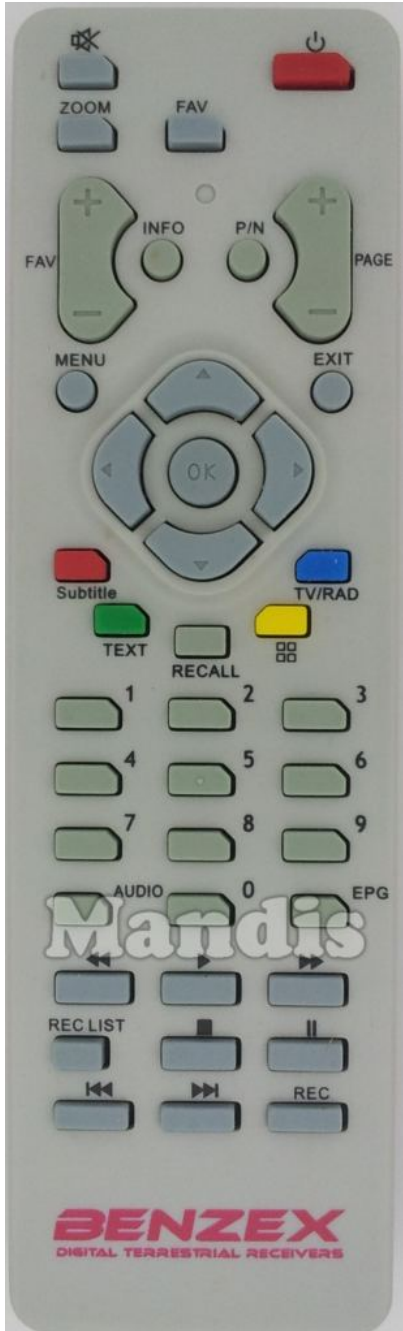
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Zoom		Eject
	FAV		Pre Ch
	FAV+		Vol +
	FAV-		Vol -
	Info		Info
	P/N		Smart
	Page+		Ch +
	Page-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	Text		Text
	[+]		Options
	Tv/Radio		TV/R
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Audio		Dual
	EPG		Guide
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Rec		Rec
	Rec List		List

Originalfernbedienung Ersatzfernbedienung

