









 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	P/I Scan		Media
	P/N		Blue
	Open/Close		Eject
	Prog		Sleep
	Subtitle		Subt
	Angle		Red
	Language		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	10+		Guide
	Goto		Pre Ch
	Setup		Options
	Menu		Menu
	Zoom		Shift + Eject
	Repeat		Text
	Display		Info
	A-B		List
	Title		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	R/L		TV/R
	PBC		Format





Originalfernbedienung    Ersatzfernbedienung

	Step		AV
	Return		Back
	Slow		Smart
	Resume		D. Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause

Originalfernbedienung    Ersatzfernbedienung