



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Zoom		Eject
	AV		AV
	VOD		Smart
	m@ TV		Media
	Guide		Guide
	Vol+		Vol +

 
 
 


 
 

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Home		Shift + Smart
	Home		Menu
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Liste		List
	Infos		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Retour		Back
	Quitter		Exit
	<<		<<
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Stop		Stop
	Pause / Play		Play
	Pause / Play		Pause

Originalfernbedienung Ersatzfernbedienung

