













 

















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	Tv/Radio		TV/Radio /
	7		7
	8		8
	9		9
	RCL		Back / Return
	0		0
	EPG		Guide / EPG / -/--
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

	Text		Text / Goto
	Red		Red / Netflix / Search
	Lang		Audio / Lang I/II
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	P-		CH- / Page-
	FAV		Fav / Marker / PC
	Info		Info / Angle

