



Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Computer 1		Red / Netflix / Search
	Video		Shift + 4
	HDMI		Shift + 0
	Computer 2		Blue / Prime Video / Random
	S-Video		Picture / Format
	Network		Smart / List
	Menu/Exit		Menu / Home
	Up / Keystone Up		Up
	Auto		Info / Angle
	Left/Vol-		Left
	Mode Enter		OK
	Right/Vol+		Right
	Eco Blank		Back / Return
	Down/Keystone		Down
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Zoom+/1		1
	Page+/2		2
	Mic/Vol+/3		3
	Zoom-/4		4
	Page-/5		5
	Mic/vol-/6		6
	Freeze/7		7
	Aspect/8		8
	9		9
	Mute		Mute / Dimmer





Originalfernbedienung Ersatzfernbedienung

Network Setting	Display / Media
Quick/Install/0	0
Smart Eco	Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

