
 





 






 


 
 


 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|----------|----------|---|-------|
| STEP | Step |  | Power |
| SEARCH | Search |  | TV/R |
| MUTE | Mute |  | Mute |
| SOURCE | Source |  | AV |
| 1 | 1 |  | 1 |
| 2 | 2 |  | 2 |
| 3 | 3 |  | 3 |
| 4 | 4 |  | 4 |
| 5 | 5 |  | 5 |
| 6 | 6 |  | 6 |
| 7 | 7 |  | 7 |
| 8 | 8 |  | 8 |
| 9 | 9 |  | 9 |
| 0 | 0 |  | 0 |
| 10+ | 10+ |  | Guide |
| DISPLAY | Display |  | Info |
| SUBTITLE | Subtitle |  | Subt |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|---------|
| ANGLE | Angle |  | Red |
| AUDIO | Audio |  | Dual |
| MENU/PBC | Menu PBC |  | Menu |
| TITLE | Title |  | List |
|  | Up |  | Up |
| SETUP | Setup |  | Options |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
| ENTER | Enter |  | Ok |
| VOL+ | Vol+ |  | Vol + |
| VOL- | Vol- |  | Vol - |
| MODE | Mode |  | Exit |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >> |  | >> |



