
 

 

 

 




 
 

 
 



 






 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	UHF		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Zoom		0
	II		Pause
	Recall		Back
	Menu		Menu
	i		Info

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Tv/Radio		TV/R
	Search		Shift + TV/R
	>>I		>>I
	I<<		I<<
	FAV		Pre Ch
	SAT		Media
	P/N		Options
	Tv/SAT		AV
	F1		List
	F2		Sleep





Originalfernbedienung Ersatzfernbedienung

	Help		3D
	White/[...]		Subt
	Red/AudioR/L		Red
	Green/[+]		Green
	Yellow/Timer		Yellow
	Blue/[≡]		Blue

Originalfernbedienung Ersatzfernbedienung