



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





**Originalfernbedienung   Ersatzfernbedienung**

	Green / >>		>> / Tune+
	Green / >>		Green / APP / Repeat
	Yellow / I<<		I<< / Preset-
	Yellow / I<<		Yellow / YouTube / Repeat
	Blue / >>I		Blue / Prime Video / Random
	Blue / >>I		>>I / Preset+
	Text / Play/Pause		Text / Goto
	Text / Play/Pause		Pause / Step / Freeze
	Text / Play/Pause		Play / Slow
	Stop / Still		Stop / Hold
	Timer / Subtitle		Subtitle / EQ
	Size / Aspect		Zoom / Size
	Cancel [≡X]	+	Shift + Exit / Cancel / Clear
	Radio		TV/Radio /
	Audio / I/II		Audio / Lang I/II
	Rec		Rec / Rec Mode

**Originalfernbedienung   Ersatzfernbedienung**






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Stop/Still		Stop / Hold
	[≡+]		Picture / Format
	[≡o]/Subtitle		Subtitle / EQ
	[≡♦]/[+]		Zoom / Size
	[≡x]		Setup / OPT /
	Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode

