

 

 
 
 




 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Return		Back
	Exit		Exit
	Menu		Menu
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	EPG		Guide
	Rec		Rec
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red/View		Red
	Green/HDMI		Green
	Yellow/Tv Type		Yellow
	Blue/Media		Blue
	Play		Play
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Repeat	+	Shift + Text
	>>		>>
	<<		<<
	>>		>>
	<<<		<<<
	Subtitle		Subt
	Prog		SLEEP
	Goto		PRE-CH
	Tv/TXT		TEXT
	Size		FORMAT
	Hold		Eject
	Index		LIST
	Mix	+	Shift + Guide
	Reveal		OPT
	Audio		DUAL
	Pag+	+	Shift + Up

Originalfernbedienung Ersatzfernbedienung

	Pag-	+	Shift + Down
	FAV	+	Shift + Pre Ch

