































 








Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	Eject		Eject / Surround
	4		4
	5		5
	6		6
	Play/Pause		Play / Slow
	7		7
	8		8
	9		9
	Stop		Stop / Hold
	0		0
	-/--		Shift + Guide / EPG / -/--
	Return		Back / Return

Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	Vol-		Vol-
	Up		Up
	CH+		CH+ / Page+
	Vol+		Vol+
	Left		Left
	OK		OK
	Right		Right
	Sys Menu		D.Menu / Top
	CH-		CH- / Page-
	Down		Down
	Display		Display / Media
	Picture		Picture / Format
	Sound		Sound / Title
	Timer		Sleep / Timer
	Nicam/A2		Audio / Lang I/II
	Lan/Prog-		Shift + CH- / Page-





**Originalfernbedienung   Ersatzfernbedienung**

	Zoom/Prog+		Shift + CH+ /
	Sub		Subtitle / EQ
	Goto		Text / Goto
	SET/Tv/TXT/DVB-		Setup / OPT /
	Menu/Cancel/Tv Format		Menu / Home
	ANG/Reveal/Exit		Exit / Cancel / Clear
	Title/info		Shift + Sound / Title
	<</Hold/Languag		<< / Tune-
	>>/Size/Text		>> / Tune+
	<</Subpage		<< / Preset-
	FAV		Fav / Marker / PC
	>> /Index		>>  / Preset+
	EPG		Guide / EPG / -/--
	Red/Pro		Red / Netflix / Search
	Tv/Radio		TV/Radio /
	Green/Slow/Audio		Green / APP / Repeat
	Yellow/Rep/Freeze		Yellow / YouTube / Repeat

**Originalfernbedienung   Ersatzfernbedienung**

	Blue/A-B/Subtitle		Blue / Prime Video / Random

