 



 

 

 

 



 



 

 

 

 

 

 

 






 






 











Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Screen		Display / Media
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	Open/Close		Eject / Surround
	4		4
	5		5
	6		6
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	7		7
	8		8
	9		9
	Stop		Stop / Hold

 

 

 



 

 

 



 

 

 









 



Originalfernbedienung    Ersatzfernbedienung

	0		0
	-/--		Shift + Guide / EPG / -/--
	Return		Back / Return
	Rec		Rec / Rec Mode
	Up		Up
	CH+		CH+ / Page+
	Right		Right
	Vol-		Vol-
	OK		OK
	Vol+		Vol+
	Down		Down
	CH-		CH- / Page-
	Left		Left
	Tv-Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Subtitle		Subtitle / EQ

 

 

 
 


 
 
 
 
 


 






Originalfernbedienung Ersatzfernbedienung

	Picture/LAN		Picture / Format
	Sound/Zoom		Zoom / Size
	Sound/Zoom		Sound / Title
	Nicam/A2/Sub		Audio / Lang / I/II
	Sleep/Goto		Shift + Text /
	Sleep/Goto		Sleep / Timer
	EPG/Set		Guide / EPG / -/--
	FAV/Menu		Fav / Marker / PC
	FAV/Menu		D.Menu / Top
	Channel List/ANG		Smart / List
	Tv/Radio / Title		Shift + Sound / Title
	Tv/Radio / Title		TV/Radio /
	<<		<< / Tune-
	Text		Text / Goto
	>>/Hold		Shift + Stop /
	>>/Hold		>> / Tune+
	I<</Size		Shift + Zoom / Size

Originalfernbedienung Ersatzfernbedienung

	I<</Size		I<< / Preset-
	>>I / Index		>>I / Preset+
	Red/Pro		Red / NetfliX / Search
	Green/Slow		Shift + Play /
	Green/Slow		Green / APP / Repeat
	Yellow / Rep		Yellow / YouTube / Repeat
	Yellow / Rep		Shift + Green / APP /
	Blue / A-B		Blue / Prime Video / Random
	Blue / A-B		Shift + Yellow / YouTube /

