

 




 

 




 







 







 


 

 


 
 





 




 






 





 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Screen	 + 	Shift + Format
	Screen		Smart
	Tv / AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-	 + 	Shift + Guide
	Return		Back

 

 




 
 
 




 
 
 
 
 





 
 

Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Tv-Menu		Menu
	Exit		Exit
	Info		Info


 



 









**Originalfernbedienung    Ersatzfernbedienung**

	Subtitle		Subt
	Picture / Lan		Options
	Sound / Zoom		Dual
	Zoom	 + 	Shift + Eject
	Nicam/A2 / Sub		Media
	Sleep / Goto		Sleep
	EPG / Set		Guide
	Menu / FAV		Pre Ch
	Menu / Fav		D. Menu
	ANG / Channel		List
	Title / Tv/Radio		TV/R
	<<		<<
	Text		Text
	>> / Hold		>>
	I<<		I<<
	Size		Format
	>>I / Index		>>I

**Originalfernbedienung    Ersatzfernbedienung**

	Red / Pro		Red
	Green / Slow / Device		Green
	Yellow / Rep / Timer		Yellow
	Timer	 + 	Shift + AV
	Blue / A-B		Blue

