



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Goto		Smart
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Zoom+		Ch +
	Zoom-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	<</REV		<<
	>>/FWD		>>
	<</Prev		<<
	>>/Next		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Step		Pre Ch
	Menu		Menu
	Title		Info
	Setup		Options
	PBC		Yellow
	Up		Up
	Down		Down
	Right		Right



