


 






 





 
 


 

 











 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Display		Info
	Menu		Menu
	TV / AV		AV
	SYS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	V +		Vol +
	V -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	→ S ←		Dual
	P.P		Format
	Nicam		Shift + Dual
	Sleep		Sleep
	Hold		Stop
	Index		Media
	Size		Eject





**Originalfernbedienung** **Ersatzfernbedienung**

PGUP	PGUP		Shift + Ch +
PGDN	PGDN		Shift + Ch -
TEXT	Text		Text
REVEAL	Reveal		Options
SUBPAGE	Subpage		Subt
RED	Red		Red
GREEN	Green		Green
YELLOW	Yellow		Yellow
CYAN	Cyan		Blue

**Originalfernbedienung** **Ersatzfernbedienung**