
 


















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Sound / Title
	Copy		Fav / Marker / PC
	Zoom		Zoom / Size
	TV System		TV/Radio /
	Browser		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK

**Originalfernbedienung    Ersatzfernbedienung**

	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Picture / Format
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

TIMER	Timer	TIMER SLEEP	Sleep / Timer
PAUSE/STEP	Pause/Step	STEP-FREEZE	Pause / Step / Freeze
SLOW	I>/Slow	SURROUND	Eject / Surround
PREV	I<<	PRESET-	I<< / Preset-
RECLIST	Rec List	LIST SMART	Smart / List
INS REPLAY	←/INS Replay	CH PAGE -	CH- / Page-
CM SKIP	→/CM Skip	+ CH PAGE	CH+ / Page+
NEXT	>>I	PRESET+	>>I / Preset+
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
FR	<<	TUNE-	<< / Tune-
F1	F1	TOP MENU D.MENU	D.Menu / Top
SOURCE	Source	RDS AV INPUT	AV / Input / RDS
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
FF	>>	TUNE+	>> / Tune+

Originalfernbedienung Ersatzfernbedienung