


Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Vol+		Vol+
	Color+		Right
	C/PH+		CH+ / Page+
	><		Fav / Marker / PC
	Vol-		Vol-
	Color-		Left
	C/PH-		CH- / Page-
	Return		Back / Return
	4		4
	5		5
	2		2
	3		3
	0/AV		0
	1		1
	8		8
	9		9





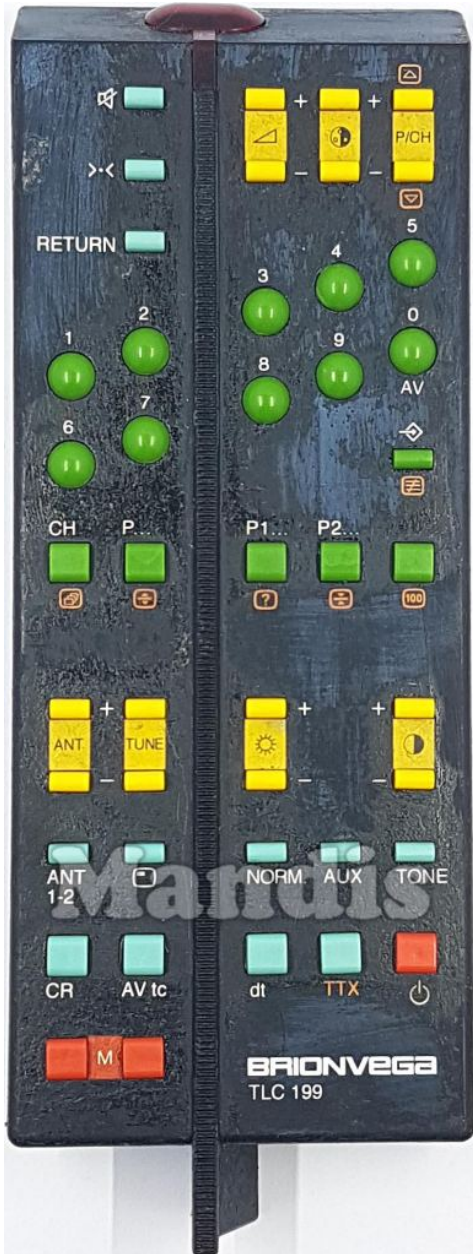


 





 









Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	Input/[=]		AV / Input / RDS
	CH/[]		Zoom / Size
	P/[]		TV/Radio /
	P1/[?]		Audio / Lang I/II
	P2/[+]		Subtitle / EQ
	100		Guide / EPG / -/-
	Ant+		>> / Tune+
	Tune+		Shift + >> /
	*+		Up
	Contrast+		>> / Preset+
	Ant-		<< / Tune-
	Tune-		Shift + << /
	*-		Down
	Contrast-		<< / Preset-
	Ant 1-2		Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Vol+		Vol+
	Color+		Right
	P/CH+		CH+ / Page+
	><		Fav / Marker / PC
	Vol-		Vol-
	Color-		Left
	P/CH-		CH- / Page-
	Return		Back / Return
	4		4
	5		5
	2		2
	3		3
	0/AV		0
	1		1
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	Input/[=]		AV / Input / RDS
	CH/[]		Zoom / Size
	P/[]		TV/Radio /
	P1/[?]		Audio / Lang I/II
	P2/[+]		Subtitle / EQ
	100		Guide / EPG / -/-
	Ant+		>> / Tune+
	Tune+		Shift + >> /
	*+		Up
	Contrast+		>> / Preset+
	Ant-		<< / Tune-
	Tune-		Shift + << /
	*-		Down
	Contrast-		<< / Preset-
	Ant 1-2		Red / Netflix / Search



