

 
 

 
 
 
 
 

 
 

 
 
 
 
 
 
 
 

 
 


 
 


 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Info. / Display		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Source		AV
	Exit		Exit
	Freeze		Pause
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	FAV		Pre Ch
	EPG		Guide





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Subtitle		Subt				
	TV / Radio		TV/R				
	Audio I / II		Dual				
	Text		Text				
	Index		Smart				
	Mix		Shift + Text				
	Reveal		Media				
	Size		Eject				
	Subpage		Shift + Subt				
	Hold		Stop				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

