


 







 



 

 



 

 





 




 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH.List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	PIC.Mode		Picture / Format
	S.Mode		Sound / Title





 

 

 

 

 

 

 

 



 

 



 

 



Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Rec		Rec / Rec Mode
	Timeshift		Shift + Pause / Step /
	Timer		Shift + Sleep / Timer
	Rec.List		Shift + Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





 



 



Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Aspect		Shift + Picture / Format
	Tv/Radio		TV/Radio /
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Reveal		D.Menu / Top
	Audio		Audio / Lang I/II
	Display		Display / Media
	Text		Text / Goto
	Size		Zoom / Size
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Subpage		Setup / OPT /
	Stop		Stop / Hold
	Hold		Shift + Stop / Hold

Hold

Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

