


 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Aspect		Shift + Picture / Format
	Recall		Back / Return
	TVG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II


**Originalfernbedienung    Ersatzfernbedienung**

	Display		Display / Media
	Tv/Radio		TV/Radio /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	FAV		Fav / Marker / PC
	Vol+		Vol+
	Vol-		Vol-
	Rec		Rec / Rec Mode
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Media		Shift + Display / Media
	Source		AV / Input / RDS


 


 
 




Originalfernbedienung Ersatzfernbedienung

	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Text		Text / Goto
	Hold		Shift + Stop /
	Reveal		D.Menu / Top
	Subpage		Setup / OPT /
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop		Stop / Hold
	Index		Info / Angle
	Size		Zoom / Size
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

