
 





 






 


 
 
 






Originalfernbedienung Ersatzfernbedienung

STEP	Step		Power
SEARCH	Search		TV/R
MUTE	Mute		Mute
SOURCE	Source		AV
1	1		1
2	2		2
3	3		3
4	4		4
5	5		5
6	6		6
7	7		7
8	8		8
9	9		9
0	0		0
10+	10+		Guide
DISPLAY	Display		Info
SUBTITLE	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

ANGLE	Angle		Red
AUDIO	Audio		Dual
MENU/PBC	Menu PBC		Menu
TITLE	Title		List
	Up		Up
SETUP	Setup		Options
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter		Ok
VOL+	Vol+		Vol +
VOL-	Vol-		Vol -
MODE	Mode		Exit
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	<<		<<
REPEAT	Repeat	REPEAT TEXT	Text
SLOW	Slow	ECO 3D	3D
PROGRAM	Program	PROG SLEEP	Sleep
ZOOM	Zoom	ZOOM	Eject

Originalfernbedienung Ersatzfernbedienung

