
 

 
 
 

 

 

 

 
 



 

 
 


 



 
 
 
 




 



 

 



 
 

 
 
 
 
 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Reveal		Media	
Info	 + 	Shift + Info	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Menu audio		Dual	
Chan.Up		Ch +	
Volume-		Vol -	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung

8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Off/Tim		List
Mix Scan		3D
Yellow		Yellow
Audio+		Options
Blue		Blue
Disp		Shift + AV
Aft/Caf		Shift + Ok
Color+ P.Std		>>I
Search		Shift + TV/R
Bright+ Mode		>>

Originalfernbedienung Ersatzfernbedienung

4.# 16:9		Format
Contrast+		Shift + Ch +
Color- S.Std		I<<
Bright- Sys		<<
Contrast-		Shift + Ch -
Surround		Shift + Red
Nicam/Mono		Shift + Green
Level L		Shift + Yellow
Level R/Woofer		Shift + Blue

